
INSTRUCTION FOR USE

IFU-RS-EN Rev.1 Pag.1/2

FILLING THE RESERVOIR


BEFORE FILLING THE RESERVOIR

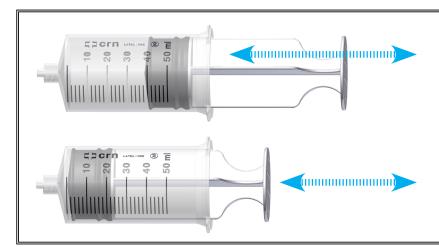

1. Slide the piston backwards and forwards inside the reservoir body twice to distribute the lubricant along the cylinder wall.

WARNING: never remove the rubber piston from the cylinder!

FILLING THE RESERVOIR

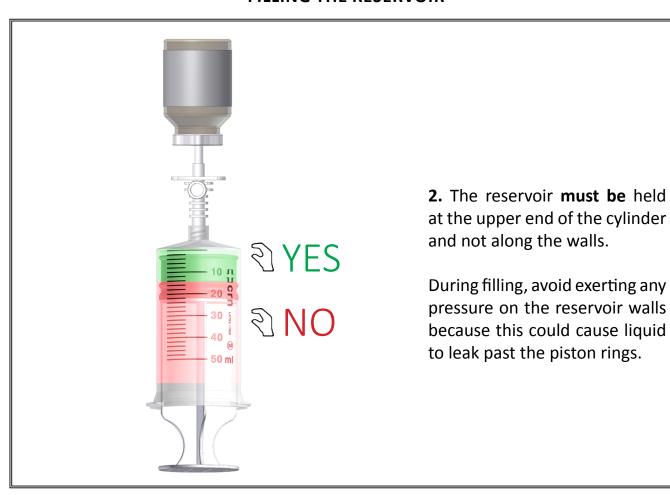




INSTRUCTION FOR USE

IFU-RS-EN Rev.1 Pag.2/2

FILLING THE RESERVOIR

- 3. The liquid must be withdrawn slowly.
- **4.** The stem **must be** extracted axially with respect to the reservoir.

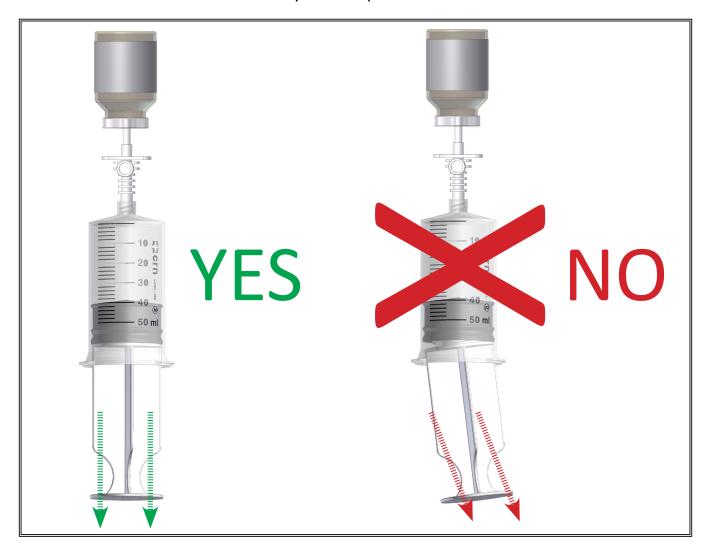

5. Do not fill the reservoir beyond the maximum volume allowed of 50 ml.

WARNING



CONNECTING THE RESERVOIR TO THE PUMP

When making the connection, avoid exerting any pressure on the reservoir walls, because this could cause liquid to leak past the two piston rings.

Some small leakage past the first ring might occur but this does not compromise the correct operation of the reservoir or the delivery of the liquid drug.